




Installation Instructions

Cat-Back Split Rear Exhaust

Toyota Tundra 4.6L, 4.7L, 5.7L 2/4wd
Crew Max, Short Bed 5.5' /Double Cab, Standard 6.5' Bed

Part #7402

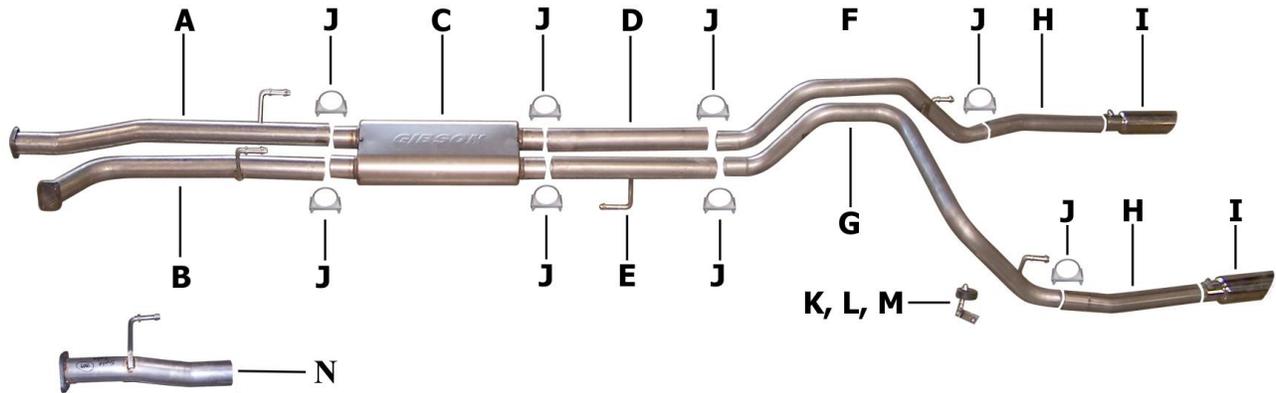

ITEM	PART	QUANTITY	DESCRIPTION
A	700905	1	2.5" Passenger Side Headpipe
B	700906	1	2.5" Driver Side Headpipe
C	11240	1	Superflow CFT Muffler
D	700909	1	2.5" Passenger Side Extension Pipe
E	700910	1	2.5" Driver Side Extension Pipe
F	700913	1	2.5" Passenger Side Overaxle Pipe
G	700914	1	2.5" Driver Side Overaxle Pipe
H	700915	2	2.5" Exit Pipe
I	500640	2	4.0" Stainless Tip
J	5757	8	2.5" Clamp
K	4267	1	Rear Tailpipe Hanger
L	4315	1	Bolt Kit for Tailpipe Hanger
M	4240	1	Rubber Grommet
N	701093	1	2.5" Adapter for 2009 Models

Thank you for purchasing our Gibson Exhaust System for your vehicle.
If you need further assistance, please do not hesitate to call our technical department at
(800) 528 -3044 Monday through Friday, 8am to 5 pm.

Installation Instructions #7402

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16", 15mm wrenches & sockets, WD-40, hacksaw, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



2. Remove the stock exhaust at the 2-bolt flange located in front of the muffler. Disengage the welded hangers from the OEM rubber grommets. Use WD-40 to help in the process. Do not damage or remove the rubber grommets as you will reuse them to mount your new system. Now, unbolt the tailpipe and remove exhaust. Do not throw away stock flange bolts, as you will reuse them.



7. Install the passenger side overaxle tailpipe #F to the extension pipe. Use clamp #J to secure. Do not tighten. Insert welded hanger into rubber grommet.



3. 2009 Models use headpipe #K on driverside. You will not use #A.



8. Install rear tailpipe hanger #K. Use bolt kit #L to secure. Use the hole on frame closest to the rear shackle. Install rubber grommet on rear hanger.



4. Install passenger side headpipe #A using your stock bolts. Do not tighten. Next, install driver side headpipe #B using stock bolts. Do not tighten. Install metal hangers into rubber grommets.




9. Install driver side overaxle tailpipe #G onto extension pipe, use clamp #J to secure pipe. Do not tighten. Insert welded hanger into rubber grommet.



5. Install muffler #C onto headpipes 1.5"-2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamps #J to secure the muffler to the headpipes. Do not tighten. Muffler inlet is looking into the louvers.



10. Next, install the exit pipes #H. Use clamps #J to secure the tailpipes.

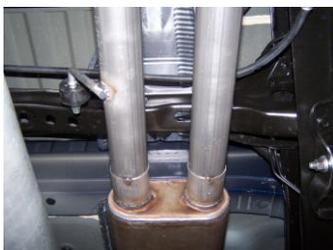

6. Install extension pipe #D into muffler. Use clamp #J to secure. Do not tighten. Next install driver side extension pipe #E into muffler using clamp #J to secure. Do not tighten. Insert welded hanger into rubber grommet.



11. Install stainless steel tips. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration. Inspect all fasteners after 25-50 miles of operation and re-tighten as necessary.



GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of the exhaust.

Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to prevent heat related damage or fire.