



PERFORMANCE EXHAUST SYSTEMS


# INSTRUCTION MANUAL

## CAT-BACK STAINLESS SPLIT REAR EXHAUST

### CHEVY TRUCK 4.3L- 5.0L 2/4WD

### EXTENDED CAB, SHORT BED

### PART #65528

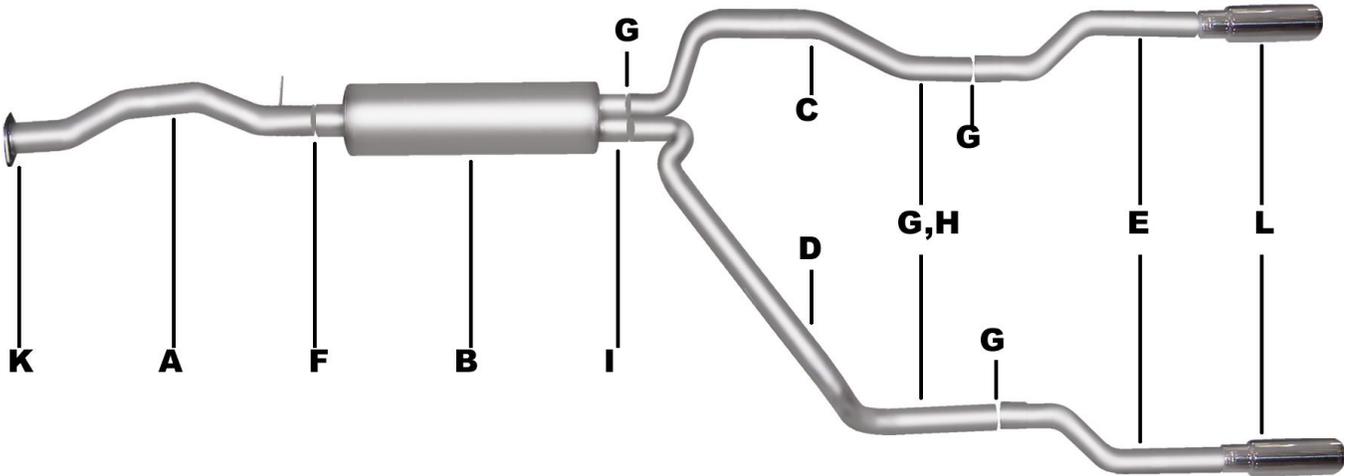

ITEM	PART #	QTY.	DESCRIPTION
A	161-30041FS	1	STAINLESS HEADPIPE W/FLANGE #GP-305
B	789800S	1	STAINLESS DUAL OUTLET MUFFLER
C	248-5525S	1	2 ½" STAINLESS PASS. SIDE OVERAXLE PIPE
D	249-5526S	1	2 ½" STAINLESS DRIV. SIDE OVERAXLE PIPE
E	246-6528S	2	2 ½" STAINLESS EXIT PIPE
F	OHD300	1	3" CLAMP
G	5757	5	2 ½" CLAMP
H	08269	2	10" METAL HANGER
H	BO-101	2	BOLT KIT FOR 10" HANGER
I	4158	1	REAR MUFFLER HANGER
J	ZIP	2	ZIP TIE
K	9688	1	HEADPIPE FLANGE GASKET
L	500374	2	3 ½" STAINLESS TIPS

#### **4WD'S MAY HAVE TO REMOVE SPARE TIRE**

*Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday through Friday, 8:00 AM to 5:00 PM*

# EXHAUST INSTRUCTIONS #65528

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACKSTANDS WHEN UNDER THE VEHICLE, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GOGGLES.

DO NOT WORK WITH HOT PIPES.


## SUGGESTED TOOLS

9/16" SOCKET, 15MM SOCKET, 1/2" SOCKET, 1/2" WRENCH, HACKSAW, JACKSTAND, WD-40

**LAYOUT THE EXHAUST ON THE GROUND AND COMPARE PART NUMBERS WITH THE MANUAL.**



UNBOLT THE 2-BOLT FLANGE LOCATED BEHIND THE CONVERTER, **SAVE STOCK NUTS AND BOLTS FOR YOU WILL REUSE THEM.** NOW CUT OFF YOUR STOCK TAILPIPE JUST BEHIND THE MUFFLER AND REMOVE. USE WD-40 TO AID IN REMOVAL OF THE EXHAUST AND HANGERS. LEAVE ALL RUBBER GROMMETS ON THE HANGER.

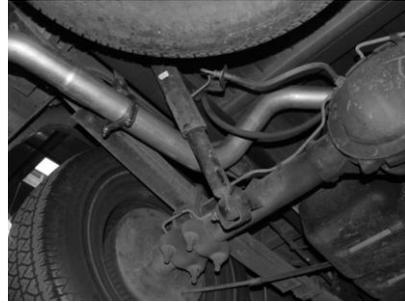


INSTALL DRIVERSIDE TAILPIPE #D INTO MUFFLER 1-1/2" TO 2". THIS PIPE GOES BETWEEN THE SHOCK & FRAME. SLIDE CLAMP #G OVER PIPE AND CONNECT IT TO THE HANGER#H. THIS WILL HOLD UP THE TAILPIPE. ATTACH TAILPIPE TO MUFFLER OUTLET USING CLAMP #I.




BOLT THE HEADPIPE #A ONTO FACTORY FLANGE USING GASKET #K AND RE-USING THE FACTORY NUTS AND BOLTS. SLIDE THE WELDED HANGER INTO THE RUBBER GROMMET. DO NOT TIGHTEN. INSTALL MUFFLER ON TO THE HEADPIPE 1- 1/2" TO 2" WITH INLET TOWARDS CONVERTER USING CLAMP #F TO SECURE MUFFLER TO HEADPIPE. USE A JACKSTAND TO SUPPORT THE MUFFLER. DO NOT TIGHTEN.



INSTALL PASSENGER SIDE TAILPIPE #C INTO MUFFLER 1-1/2" TO 2" USING CLAMP #G THIS WILL HOLD UP THE PIPE. ATTACH CLAMP #G TO TAILPIPE AND SECURE WITH HANGER #H. DO NOT TIGHTEN.

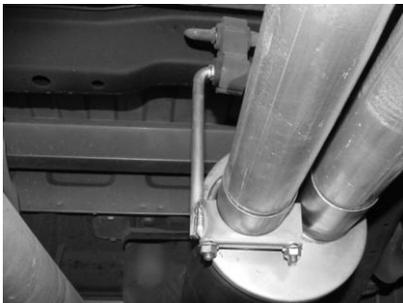

INSTALL REAR MUFFLER HANGER #I ONTO DRIVERSIDE MUFFLER OUTLET. INSERT THE WELDED HANGER INTO RUBBER GROMMET. DO NOT TIGHTEN.

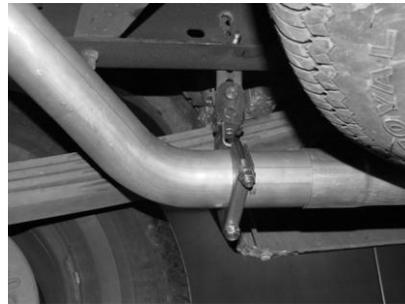

INSTALL EXIT PIPES #E ONTO TAILPIPES. ROLL EXIT PIPES UNTIL YOU HAVE THE CORRECT ANGLE. USE CLAMPS #G TO SECURE TO THE TAILPIPES. DO NOT TIGHTEN. CUT EXIT PIPE TO PROPER LENGTH.



REMOVE STOCK REAR HANGER FROM FRAME ON PASSENGER SIDE. INSTALL 10" METAL HANGER #H. USE THE FIFTH HOLE FROM THE BOTTOM. INSTALL IT IN THE FACTORY HOLE WHERE THE STOCK HANGER WAS IN. IT IS LOCATED APPROX. 20" FROM REAR OF FRAME 3/8" HOLE.



NOW TIGHTEN ALL BOLTS AND CLAMPS. USE ZIP TIES TO SECURE VENT LINES AND BRAKE LINES.

INSTALL STAINLESS TIPS.

**MAKE SURE YOU HAVE A MINIMUM OF 1" CLEARANCE AWAY FROM ALL PIPES, RUBBER BRAKE LINES, TIRES, SHOCKS, SPARE TIRE, FUEL LINES, ETC...**