


**INSTRUCTION MANUAL
CAT-BACK DUAL EXTREME EXHAUST**

FORD F150 TRUCK 3.7L-5.0L-6.2L 2/4WD
SUPERCREW, SHORT BED
SUPERCAB, SHORT BED

PART # 69016

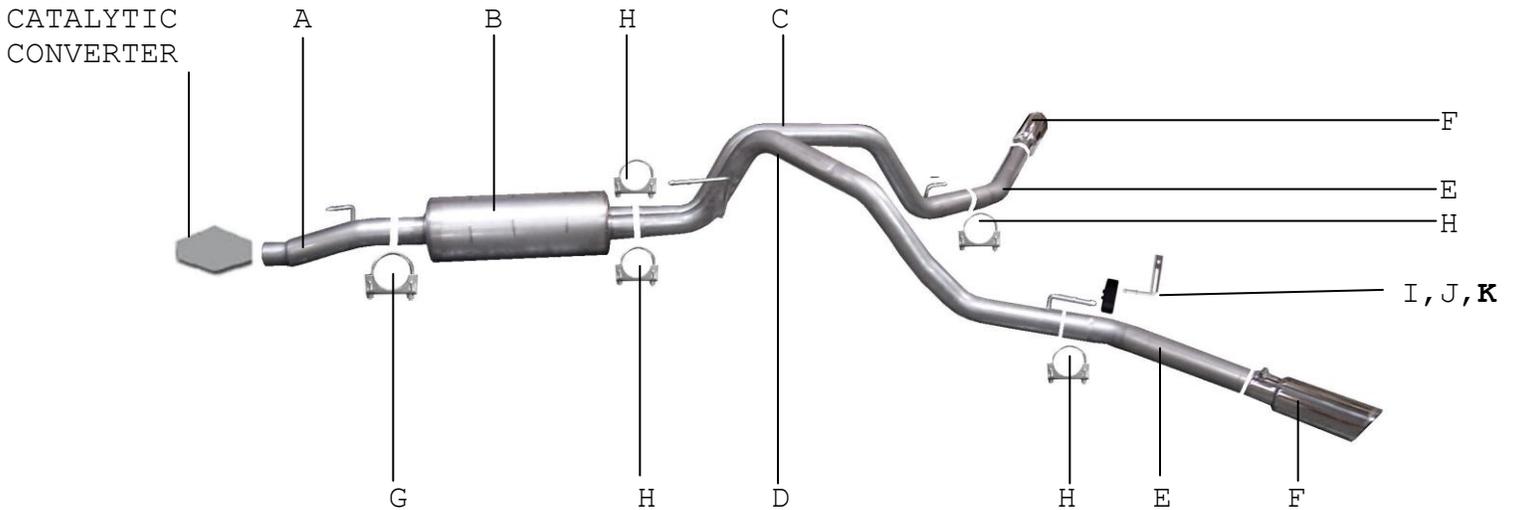

ITEM	PART#	QUANTITY	DESCRIPTION
A	1405-701156S	1	3" HEADPIPE W/WELDED HANGER
B	758219S	1	SUPERFLOW MUFFLER
C	1301-701069S	1	2.5" PASSENGERSIDE OVERAXLE TAILPIPE
D	1302-701070S	1	2.5" DRIVERSIDE OVERAXLE TAILPIPE
E	253-500626S	2	2.5" EXIT PIPES
F	500374	2	3 1/2" STAINLESS TIPS
G	OHD300	1	3" CLAMP
H	5757	4	2.5" CLAMP
I	4364	1	DRIVERSIDE REAR TAILPIPE HANGER
J	4240	1	RUBBER GROMMET
K	BO-1045	1	REAR TAILPIPE HANGER BOLT KIT *

Will not fit SVT Raptor or Harley Davidson Edition

WILL FIT WITH 18" SPARE TIRE

Thank you for purchasing our GIBSON PERFORMANCE EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical department at 1-800-528-3044 Monday through Friday, 8:00 am to 5:00 pm.

EXHAUST INSTALLATION #69016

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE YOU USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STAND TO SUPPORT THE TRUCK WHILE OFF THE GROUND. SET PARKING BRAKE, BLOCK THE TIRES AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

HACKSAW, JACKSTAND, 1/2" WRENCH & SOCKET, 9/16" SOCKET & WRENCH, 15MM WRENCH & SOCKET WD-40, MEASURING TAPE



TO REMOVE YOUR STOCK EXHAUST, REMOVE IT FROM THE CLAMP LOCATED JUST IN FRONT OF THE MUFFLER REMOVE HANGERS FROM RUBBER GROMMETS BY PULLING EXHAUST TOWARDS THE REAR OF THE VEHICLE, USE WD-40 TO AID IN REMOVAL, LEAVE GROMMETS IN PLACE.



INSTALL DRIVERS SIDE TAILPIPE # D INTO MUFFLER 1 1/2" TO 2". INSERT WELDED HANGERS INTO RUBBER GROMMETS. USE CLAMP # H TO SECURE PIPE TO MUFFLER, DO NOT TIGHTEN.



INSTALL HEADPIPE #A INTO STOCK PIPE. THE END OF THE PIPE SHOULD BE AT THE 12 O'CLOCK POSITION, ATTACH WITH FACTORY CLAMP. DO NOT TIGHTEN. INSERT WELDED HANGER INTO RUBBER GROMMET.



INSTALL PASSENGER SIDE TAILPIPE # C INTO MUFFLER 1 1/2" TO 2". INSERT WELDED HANGER INTO RUBBER GROMMET, USE CLAMP # H TO SECURE PIPE TO MUFFLER. DO NOT TIGHTEN. ROTATE PIPE TOWARDS DRIVERSIDE.



INSTALL EXIT PIPES # E ONTO TAILPIPES. ROTATE OUT TO THE SIDES; ATTACH TO TAILPIPES WITH CLAMPS # H.



INSTALL MUFFLER # B ONTO HEADPIPE 1 1/2" TO 2". USE CLAMP # G TO SECURE MUFFLER TO HEADPIPE. DO NOT TIGHTEN. USE A JACK STAND TO HOLD UP THE MUFFLER. OUTLETS SHOULD BE LEVEL.

INSTALL YOUR STAINLESS TIPS TO YOUR DESIRED LOOK THEN GO BACK AND TIGHTEN ALL CLAMPS, ROTATE SYSTEM FOR BEST CLEARANCE BEFORE TIGHTENING.



ON DRIVER SIDE: ATTACH REAR TAILPIPE HANGER #I TO FRAME BY REMOVING THE 18MM HITCH BOLT. THEN RE INSTALL BOLT WITH HANGER. (IF YOU DO NOT HAVE A FACTORY HITCH USE BOLT KIT #K TO ATTACH HANGER #I TO THE FRAME RAIL.

MAKE SURE YOU AT LEAST A 1" CLEARANCE ON ALL BRAKE LINES, FUEL LINES, SHOCKS, TIRES, ETC. USE ZIP TIES TO TIE BRAKE LINES OUT OF THE WAY.