




Installation Instructions

Cat-Back Dual Extreme Exhaust
Hummer H2 6.2L 4wd

Part #612603

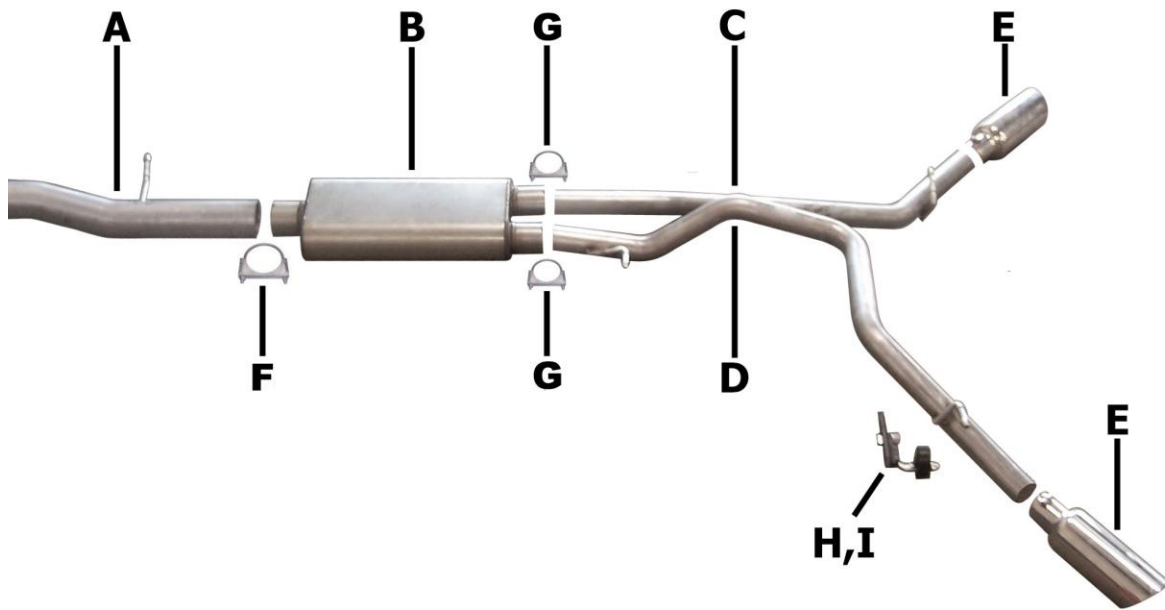

ITEM	PART	QUANTITY	DESCRIPTION
A	1395-701120S	1	3.5" Headpipe
B	11238S	1	Superflow CFT Muffler
C	1240-700998S	1	2.25" Passenger side tailpipe
D	1241-700999S	1	2.25" Driver side tailpipe
E	500553	2	4" Stainless Tip
F	4170	1	3.5" Clamp
G	5756	2	2.25" Clamp
H	4345	1	Driver side rear tailpipe hanger with hardware
I	4240	1	Rubber grommet
J	ZIP	5	Zip ties

Thank you for purchasing our Gibson Exhaust System for your vehicle.
If you need further assistance, please do not hesitate to call our technical department at
(800) 528 -3044 Monday through Friday, 8am to 5 pm.

Installation Instructions #612603

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16", 15mm wrenches & sockets, WD-40, hacksaw, jack stands

1. Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.



2. First remove hardware at the 2-bolt flange located in front of the muffler. Save the stock hardware as you will reuse it to attach new headpipe. Disengage the welded hangers from the OEM rubber grommets. Use WD-40 to aid in this process. Do not damage or remove the rubber grommets as you will reuse them to mount your new system. Now, cut off tailpipe and remove exhaust.



5. Slide the passenger side over axle tailpipe #C into the muffler 1.5-2". Use clamp #G to secure tailpipe to muffler. Do not tighten. Insert welded hanger into rubber grommet.



3. Install headpipe #A onto your existing stock front pipe and attach using stock hardware. Do not tighten. Insert welded hanger into rubber grommet.



6. Install the driver side rear tailpipe hanger #H. Place the brace on the inside of the frame and the hanger portion on the outside of the frame. Secure with supplied bolt kit.



4. Slide muffler #B onto headpipe 1.5-2". Use a jack stand to support the muffler. Use clamp #F to secure the muffler to the headpipe. Do not tighten.



6. Slide the driver side over axle tailpipe #D into the muffler 1.5-2". Use clamp #G to secure tailpipe to muffler. Do not tighten. Insert welded hangers into rubber grommets.



8. Install stainless steel tip. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration. Inspect all fasteners after 25-50 miles of operation and re-tighten as necessary.



GIBSON EXHAUST systems are designed on a factory stock vehicle. Any aftermarket products installed could increase the sound levels of the exhaust. **Make sure there is a 1" clearance from ALL rubber brake lines, shock boots, lines, tires, etc. to prevent heat related damage or fire.**