


## INSTRUCTION MANUAL CAT-BACK STAINLESS SINGLE EXHAUST TOYOTA TACOMA 3.4L S-RUNNER 2DR 2WD XTRA CAB, SHORT BED PART # 618706

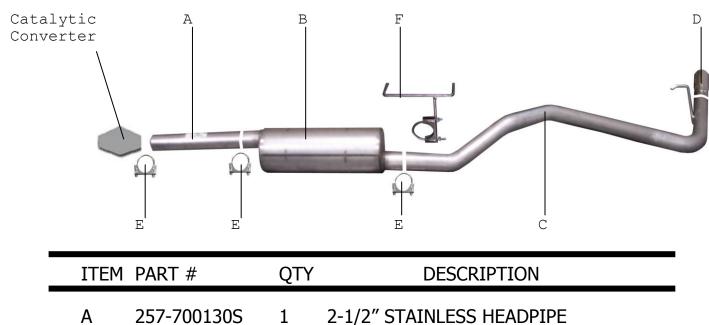

/ \	257 7001505	-	
В	788200S	1	SUPERFLOW STAINLESS MUFFLER
С	258-700129S	1	2.5" STAINLESS OVERAXLE TAILPIPE
D	500361	1	3" STAINLESS TIP
Е	5757	3	2-1/2" CLAMP

1 O.E. HANGER

F

4129

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at 1-800-528-3044, Monday through Friday, 8:00 am to 5:00 PM.


## **INSTRUCTION MANUAL**

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACKSTANDS WHEN UNDER THE VEHICLE, SET PARKLING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES. **DO NOT WORK WITH HOT PIPES!!!** 

## **SUGGESTED TOOLS:**


9/16" SOCKET, 1/2" WRENCH, HACKSAW, JACKSTANDS, WD-40

LAY OUT THE GIBSON EXHAUST AND COMPARE PART NUMBERS WITH THE MANUAL. LEAVE ALL FACTORY RUBBER GROMMETS IN PLACE. FOR EASIER REMOVAL OF HANGERS SPRAY WD-40 ON THEM. CUT THE TAILPIPE BEHIND THE MUFFLER TO REMOVE STOCK EXHAUST

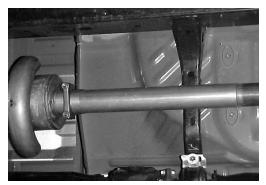

CUT STOCK EXHAUST 17-1/2" IN FRONT OF THE STOCK MUFFLER SLIDE THE HEADPIPE ONTO THE STOCK HEADPIPE USING CLAMP # E. THEN INSTALL THE MUFFLER ON HEADPIPE #A NO LESS THAN 1-1/2" TO 2" USING CLAMP #E. THE MUFFLER OUTLET WILL BE CLOCKED AT 12 O'CLOCK POSITION. INLET OF MUFFLER HAS LOUVERS FACING THE MOTOR.

DO NOT TIGHTEN.

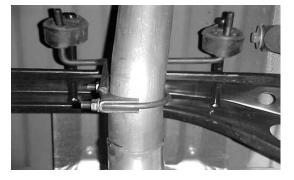

INSTALL REAR MUFFLER OE HANGER #F TO SUPPORT THE TAILPIPE.THE BOLTS FROM THE OE HANGER WILL BE FACING THE DRIVERSIDE. THIS HANGER ATTACHES TO THE TAILPIPE, NOT THE MUFFLER. DO NOT TIGHTEN.



INSTALL OVERAXLE TAILPIPE # C INTO THE MUFFLER, USING CLAMP # E. INSERT WELDED HANGER INTO RUBBER GROMMET.



INSTALL THE STAINLESS TIP. USE A STAINLESS OR ALUMINUM CLEANER TO POLISH TIP. NOW TIGHTEN ALL HANGERS AND CLAMPS.

MAKE SURE YOU HAVE A MINIMUM OF A 1" CLEARANCE FROM ALL BRAKE LINES, FUEL LINES, TIRES, SHOCKS, ETC.