




# INSTALLATION INSTRUCTIONS

2016 Polaris RZR TURBO  
 Twin Dual Rear Exit Stainless Steel Exhaust  
**PART #98025**

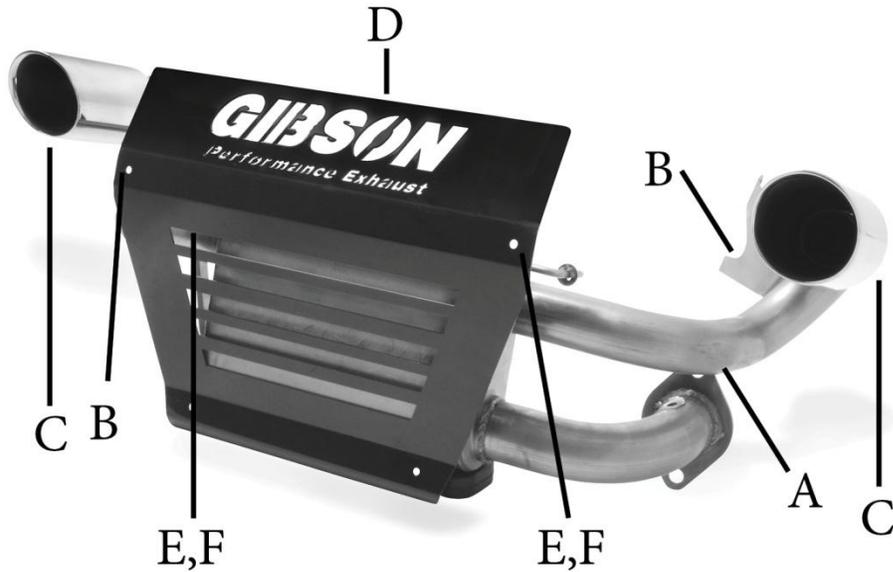

| ITEM | PART #      | QTY | DESCRIPTION                    |
|------|-------------|-----|--------------------------------|
| A    | 999700896S  | 1   | MUFFLER ASSEMBLY               |
| B    | BO-1076     | 1   | BOLT KIT FOT TAILPIPE BRACKETS |
| C    | 500658      | 2   | 4.0" INTERCOOLED EXHAUST TIPS. |
| D    | 999700806-B | 1   | GIBSON BACK PLATE              |
| E    | 999700807-B | 2   | BRACKET FOR REAR GIBSON PLATE  |
| F    | BO-1077     | 1   | BOLT KIT FOR GIBSON BACK PLATE |

# EXHAUST INSTALLATION

## PART# 98025

WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE ALL THE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE VEHICLE, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES.

**DO NOT WORK WITH HOT PIPES!!!**

1. Disconnect the negative battery cable before removal of the OEM Exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual. Remove the factory exhaust by unbolting the factory rear heat shield bumper behind the factory muffler. You will re use the hardware for the Gibson install. Disconnect the 2 factory springs and unbolt the factory exhaust. Do not damage the factory exhaust gasket. You will re use this gasket.



Drill here.



2. Once you have removed the heat shield remove the factory brackets and re install the Gibson supplied brackets #E using the factory bolts and factory location. Keep loose until final install.

3. Next use a 1/4" drill bit to drill the hole for the tailpipe brackets. You will drill the lower threaded hole on the both driver and passenger side rear bed bracket. See above photo for location. Drill hole on both sides of the vehicle.

4. Next install the Gibson Muffler assembly. Install the top hanger mounts first then slide the inlet over the factory head pipe re using the factory gasket and nuts. Once in position, install head pipe and top muffler springs.



5. Bolt the tailpipe brackets to the rear under bed bracket. You will use Bolt Kit # B. Use the large fender washers on the back side of the top hole. You may have to loosen the factory bracket to adjust for fitment. Do not tighten until all bolts are installed. Install both sides.

6. Install rear Gibson beauty plate. Use the factory bolts and supplied nylock nuts for the top two holes. Once they have been installed tighten the Gibson brackets at the Razor frame. Adjust plate for a level finish.

7. Once everything has been installed and tighten install your supplied Gibson tips. Slide the tips on to your desired look and tighten down. Check for 1" clearance around all pipes, rubber brake lines, shock boots, tires, etc... and go have fun!

**"MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, ETC..."**